

**ombicar**  
POLSKA

www.combicar.com.pl


# POSZERZENIA NADKOLI UNIWERSALNE MUDGUARDY

ZABEZPIECZENIE I OZDOBA TWOJEGO AUTA I TWOJEGO 4X4  
PROTECTION AND DESIGN FOR YOUR CAR AND YOUR 4X4

Made in Italy



## ART. 235NG

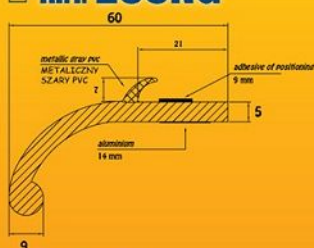


### KIT CONTAINS

- n°1 Roll x 6 m n°60
- n°1 Roll x 12,5 m n°120



## ART. 235N

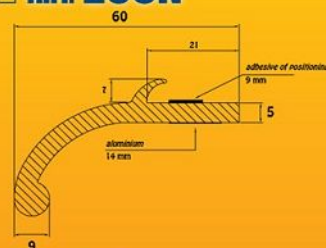


### KIT CONTAINS

- n°1 Roll x 6 m n°60
- n°1 Roll x 12,5 m n°120



## ART. 203

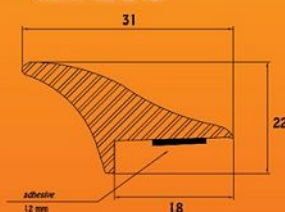


### KIT CONTAINS

- n°4 pcs x 1,5 m
- 3M adhesive



## ART. 205/1

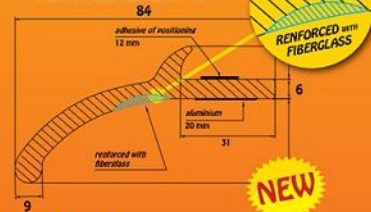

### KIT CONTAINS

- n°2 pcs x 1,5 m n°30
- n°4 pcs x 1,15 m n°60
- n°1 Roll x 6 m n°60
- n°1 Roll x 12,5 m n°120

NEW

WŁÓKNO SZKLANE  
REINFORCED WITH FIBERGLASS

### MONTAŻ

1. WYCZYŚCIĆ POWIERZCHNIĘ
2. DOCIĄĆ PROFIL DO POŻĄDANEJ DŁUGOŚCI
3. PODGRZAĆ DO TEMPERATURY OK. 20 °C
4. ZAMONTOWAĆ

### ART.203:

- NIE DOTYKAĆ RĘKĄ POWIERZCHNI
- POKRYTEJ KLEJEM ABY ZACHOWAĆ LEPKOŚĆ
- PO PRZYKLEJENIU DOCIŚNĄĆ NA CAŁEJ DŁUGOŚCI
- NIE ZMIENIĄĆ MIEJSCA MONTAŻU PO PRZYKLEJENIU
- NIE MYĆ AUTA PRZEZ NASTĘPNE 3 DNI

MONTAŻ  
„ZRÓB TO SAM”  
EASY  
“DO-IT-YOURSELF”

### MOUNTING

1. Clean the surface
2. Cut the profile to length
3. Heated to a temperature of about 20° C
4. Proceed with the application

### For the art. 203:

- Do not touch the adhesive with your hands in order to avoid compromising its stickiness
- Press all over the surface to fix the adhesive
- Do not repeat the positioning
- Do not wash the car in the next three days

KONTAKT

**ombicar**  
POLSKA

QUALITY  
GUARANTEED

Piwni 33 • 05-806 Nowa Wieś • Mazowieckie • Polska  
tel. +501 359 639 • WWW.COMBICAR.COM.PL • BIURO@COMBICAR.COM.PL